



HD IP Conference Phone


CP860




Quick Start Guide(V72.2)

Packaging Contents

 The following items are included in your package. If you find anything missing, contact your system administrator.

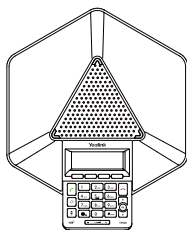


IP Conference Phone

 


Ethernet Cable



 Mobile Device Cable
(3.5mm Jack)

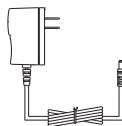

Power Adapter

 


Quick Start Guide

Assembling the Phone


1. Connect the network and power, as shown below :

 You have two options for network and power connections. Your system administrator will advise you on which one to use.

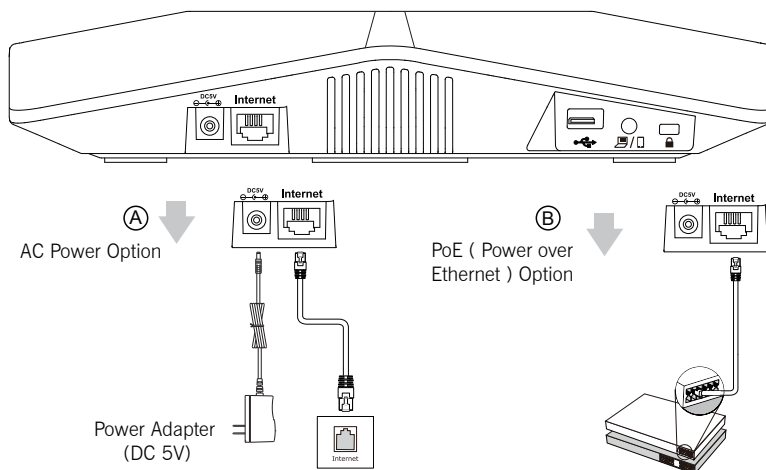


Note: If inline power (PoE) is provided, you don't need to connect the power adapter. Make sure the hub/switch is PoE-compliant.

 2. Connect the optional USB flash drive, as shown below:

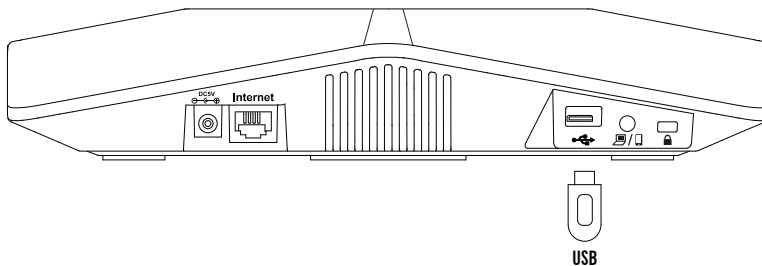


 3. Connect the optional expansion microphone, as shown below:

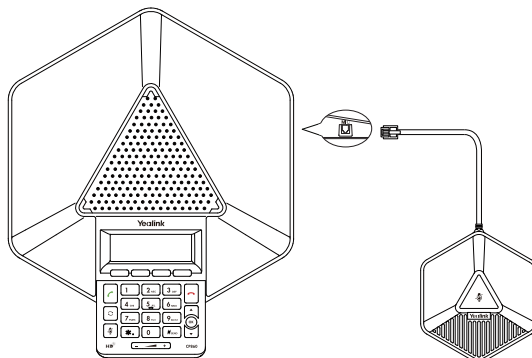

Note: Up to two expansion microphones can be connected to an IP conference phone.

 4. Connect the optional PC or mobile device, as shown below:

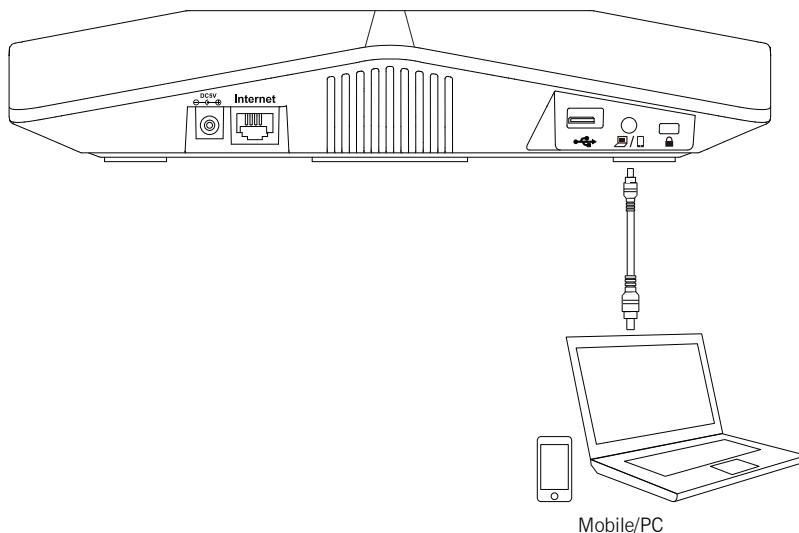


Startup

After the IP phone is connected to the network and supplied with power, it automatically begins the initialization process. When the IP phone is first powered on, it goes to the setup wizard screen with a short music after startup. The setup wizard guides you to configure some basic features via phone user interface. After you complete the setup wizard, the phone is ready for use. You can configure the phone via phone user interface or web user interface.

Welcome

Initializing...please wait

 Hardware Component Instructions

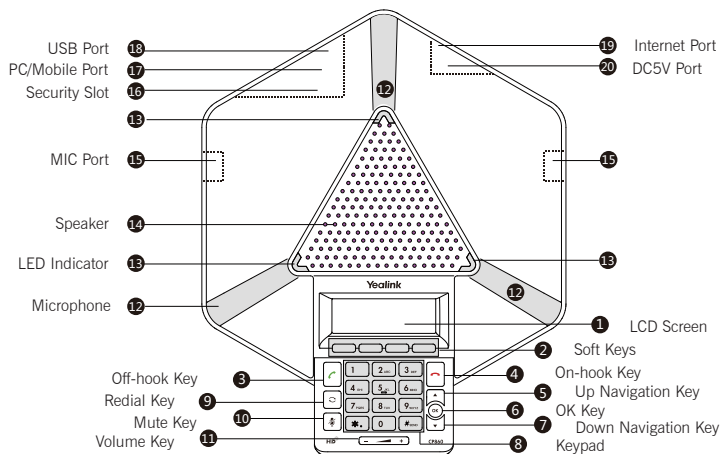

Configuring Your Phone

Configuring via web user interface

Accessing the web user interface:

1. Press the **OK** key when the phone is idle to obtain the IP address of the phone.
2. Open the web browser on your computer, enter the IP address into the address bar (e.g., "http://192.168.0.10" or "192.168.0.10") and press **Enter**.
3. Enter the user name (default: admin) and password (default: admin) in the login page and click **Confirm**.

Account Settings: Click on **Account->Register**

Parameters of the account:

Register Status:	It shows the register status of the current account.
Line Active:	You can select Enabled/Disabled to enable/disable the account.
Label:	It is shown on the LCD screen to identify the account.
Display Name:	It is shown as Caller ID when placing a call.
Register Name:	It is an authenticated ID for authentication provided by ITSP (required).
User Name:	It is provided by ITSP for registration (required).
Password:	It is provided by ITSP for registration (required).
Server Host:	It is provided by ITSP for registration (required).

Register status icons on the LCD screen:



Registered



Register Failed



Registering

Note: Check with your system administrator if any error appears during the registration process or if a specific configuration is required for your registration.

Configuring via phone user interface

Account Settings:

Press the **Menu** soft key when the phone is idle, select **Settings->Advanced Settings** (default password: admin) -> **Account** to configure the account.

Note: For more information on account parameters, refer to **Configuring via web user interface**.

Basic Call Features

Placing a Call

Do one of the following:

- Press  .
Enter the number, and then press  ,  ,  or the **Send** soft key.
- Enter the number.
Press  ,  ,  or the **Send** soft key.

Answering a Call

Press  ,  or the **Answer** soft key.

Note: You can reject an incoming call by pressing the **Reject** soft key.

Ending a Call

Press  or the **Cancel** soft key.

Redial

- Press  to enter the Placed Calls list, press  or  to select the desired entry, and then press  or the **Send** soft key.
- Press  twice when the phone is idle to dial out the last dialed number.

Call Mute and Un-mute

- Press  to mute the microphone during a call.
- Press  again to un-mute the call.

Call Hold and Resume

To place a call on hold:

Press the **Hold** soft key during an active call.

To resume the call, do one of the following:

- If there is only one call on hold, press the **Resume** soft key.
- If there is more than one call on hold, press  or  to select the desired held call, and then press the **Resume** soft key.

Local Conference

CP860 can host up to five-way conference call with other parties.

To create a three-way local conference:

1. Press the **Conf** soft key during an active call. The call is placed on hold.
2. Enter the number of the second party, and then press the **Send** soft key.
3. Press the **Conf** soft key again when the second party answers.

To join more parties in an established conference call:

1. Press the **Manage** soft key after the conference call is established.
2. Press the **New Call** soft key to place a new call.
3. Enter the number of the new party, and then press  ,  ,  or the **Send** soft key.

4. Press the **Conf** soft key when the party answers.
5. Repeat the steps 1 to 4 to join more parties in the established conference call.

During the conference call, you can do the following:

- Press the **Hold** soft key to place the conference on hold.
- Press the **Split** soft key to split the conference call into individual calls on hold.
- Press the **Manage** soft key, and then press  or  to select the desired party:
 - Press the **Far Mute** soft key to forbid the selected party from speaking. The muted party can hear everyone, but no one can hear the muted party.
 - Press the **Remove** soft key to remove the selected party from the conference call.
Press the **New Call** soft key to place a new call.
 - Press the **Back** soft key to return to the previous screen.
- Press  to mute the conference call.
- Press the **Cancel** soft key to drop the conference call.

Call Recording

If you insert a USB flash drive into the USB port on your phone, you can record active calls and conferences on your phone.

Note: It is necessary to know about the rules and restrictions of any governing call-recording in the place you are in. It is also very important to have the consent of the person you are calling before recording the conversation.

To record a call:

1. Press the **More** soft key, and then press the **Start REC** soft key during a call.

To stop recording:

1. Press the **More** soft key, and then press the **Stop REC** soft key.

Recorded Calls Playback

You can play back recorded calls on your phone through the phone's speaker.

To browse the recorded files:

1. Press **Menu->USB Record->Playback Recording**.
2. Press  or  to scroll through the recorded files.

To play back a recording:

1. Press **Menu->USB Record->Playback Recording**.
2. Press  or  to highlight the recording you want to play back.
3. Press the **Play** soft key.

During the recording playback, you can do the following:

- To pause the playback, press the **Pause** soft key.
You can press the **Play** soft key to continue the playback.
- To skip forward the playback, press **▶▶**. Press once to skip forward 8 seconds.
- To rewind the playback, press **◀◀**. Press once to rewind 8 seconds.
- To stop the playback, press the **Back** soft key.

Customizing Your Phone

Call History

1. Press the **History** soft key when the phone is idle.
2. Select the desired call history list and press the **Enter** soft key.
3. Press  or  to select an entry from the list, you can do the following:
 - Press the **Send** soft key to call the entry.
 - Press the **Delete** soft key to delete the entry from the list.

If you press the **Option** soft key, you can also do the following:

- Select **Detail** to view detailed information about the entry.
- Select **Add to Contacts** to add the entry to the local directory.
- Select **Add to Blacklist** to add the entry to the blacklist.
- Select **Delete All** to delete all entries from the list.

Contact Directory

To add a contact:

1. Press the **Directory** soft key when the phone is idle, and then select the desired group.
2. Press the **Add** soft key to add a contact.
3. Enter a unique contact name in the **Name** field and contact numbers in the corresponding fields.
4. Press the **Add** soft key to accept the change.

To edit a contact:

1. Press the **Directory** soft key when the phone is idle, and then select the desired group.
2. Press  or  to select the desired contact, press the **Option** soft key and then select **Detail** from the prompt list.
3. Edit the contact information.
4. Press the **Save** soft key to accept the change.

To delete a contact:

1. Press the **Directory** soft key when the phone is idle, and then select the desired group.
2. Press  or  to select the desired contact, press the **Option** soft key and then select **Delete** from the prompt list.
3. Press the **OK** soft key when the LCD screen prompts "Delete Selected Item?".

Note: You can add contacts from call history easily. For more information, refer to **Call History** above.

Volume Adjustment

- Press  during a call to adjust the receiver volume of the speaker.
- Press  when the phone is idle to adjust the ringer volume.

Ring Tones

1. Press the **Menu** soft key when the phone is idle, and then select **Settings->Basic Settings->Ring Tones**.
2. Press  or  to select the desired ring tone.
3. Press the **Save** soft key to accept the change.

About us

Founded in 2001, Yealink, the global TOP 3 SIP phone provider and a leading provider of VoIP Phone and IP communication solutions, has been focusing on VoIP products characterized by reliable quality, easy deployment and affordable price for more than a decade. Today, customers from over 140 countries rely on Yealink as the backbone of global collaboration to extend the value of network communications.

More about Yealink

Since 2001, Yealink has continued to develop state-of-the art, hi-tech VoIP communication terminals that include IP video phones, IP phones and USB phones. With a worldwide market in more than 140 countries, the company has also established a first-class international service network.

Our priorities are quality, functionality, ease-of-use, customer support and competitive pricing. To provide new solutions for the future in this fast-evolving sector, Yealink's large, talented and highly-experienced VoIP R&D team is totally committed to the pursuit of excellence.

To date, we have passed more than 80 interoperability tests and meet certification requirements set by leading VoIP system and platforms. Yealink works in close partnership with T-Mobile, Telefonica, Portugal Telecom and other leading telecommunication service providers.

